INSTALLATION GUIDE



CARGO RACK

1605-FTL, 1605-FTL3, 1605-FTR, 1605-FTR3 1605-GS, 1605-GS3, 1605-PHL, 1605-PHL3 1605-MM, 1605-PHM3, 1605-PHM, 1605-PHM3 1605-PHS, 1605-PHS3, 1605-PHX, 1605-PHX3

1605-DH, 1605-DH3



ORDER OF OPERATION

CARGO RACK

