INSTALLATION GUIDE



CLAMP RACK

1630-FTL,	1630-FTL3,	1630-FTR,	1630-FTR3
1630-GS,	1630-GS3,	1630-PHL,	1630-PHL3
1630-MM,	1630-MM3,	1630-PHM,	1630-PHM3
1630-PHS,	1630-PHS3,	1630-PHX,	1630-PHX3
1630-DH,	1630-DH3		



ORDER OF OPERATION

CLAMP RACK

