INSTALLATION GUIDE

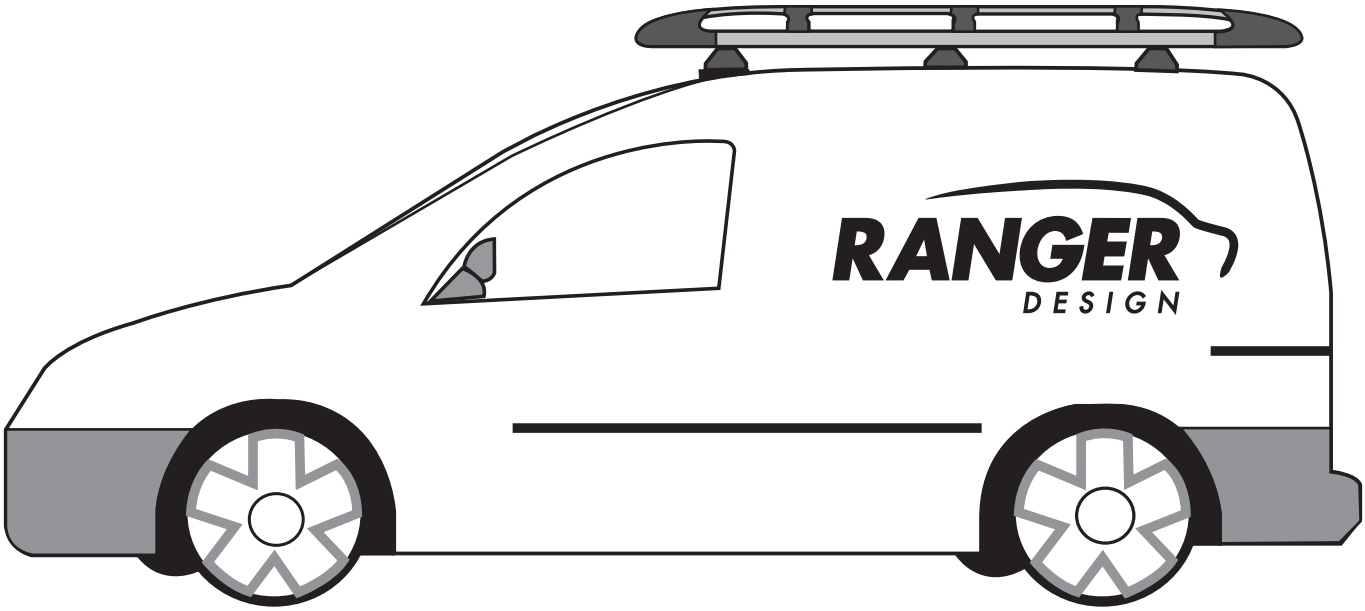

1506-TC Cargo Plus

Long Ford Transit Connect 120.5" Wheelbase

RANGER
DESIGN

PHASE 1 – ASSEMBLY

1.1 SETUP

1.1.2 Verify all parts are present.

15-U4000 BOX

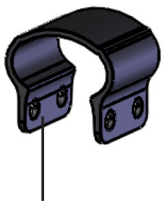

Saddle Extrusion ×6

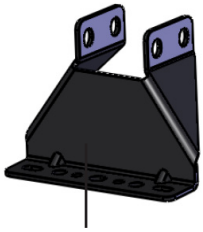

Foot ×6

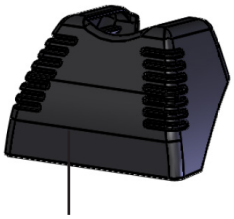

Foot Cowl ×6

Angled Rubber Spacer ×4

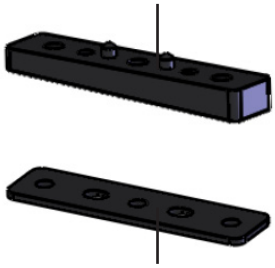

Rubber Spacer ×6

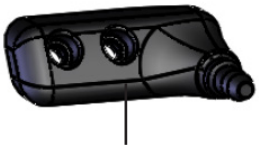

Roller Support “R” ×1

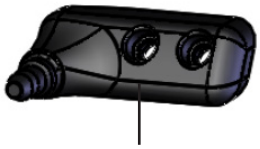

Roller Support “L” ×1

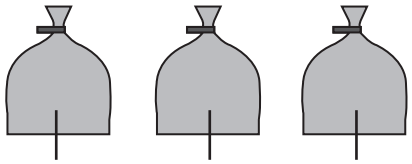

CFK - 1 ×1 CFK - 2 ×1 CFK - 3 ×1

15-U1000 BOX

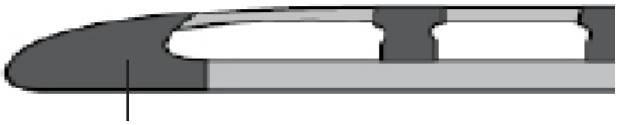

Side Rails ×2

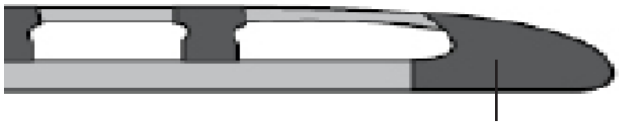

Side Rails ×2

15-U3000 BOX

Bar ×2

Roller ×1

15-U2000 BOX

Bar ×4

HARDWARE

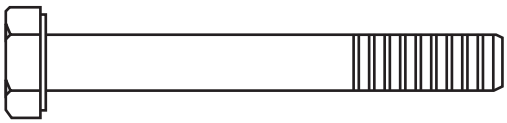

(M8 × 65) ×12

(M8 × 35) ×2

(M8 × 40) ×2

(M6 × 35) ×2

(M8) ×22

(M8) ×18

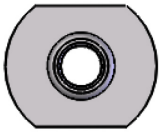

(M8) ×16

(M8) ×4

(M8) ×24

(M6) ×2

(M6) ×2

(M8) ×4

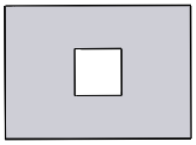

(M8) ×4

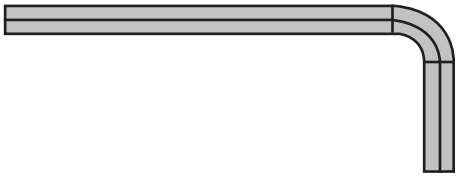

(M8) ×1

REQUIRED ITEMS



13mm ×2

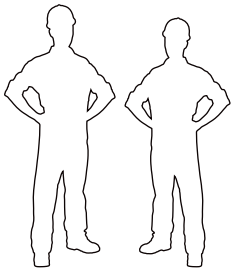

2 PERSONS

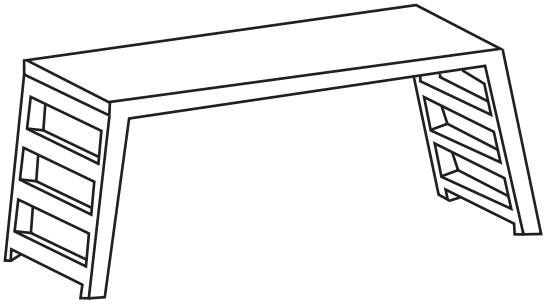

PHASE 2 – INSTALLATION

2.1 INSTALLATION

2.1.1 Install the feet.

FRONT

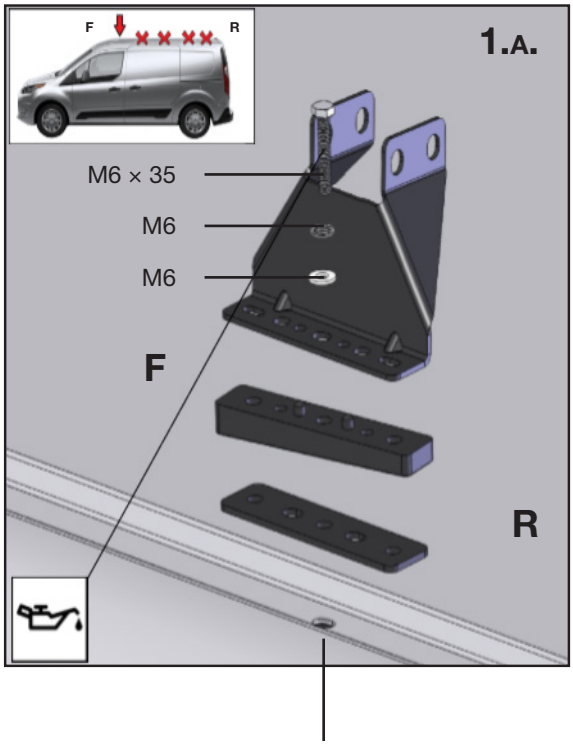

ATTACH PLUSNUT

NOTE: The plusnut in the hardware kit is metric, you need to use metric plusnut tools.

MIDDLE

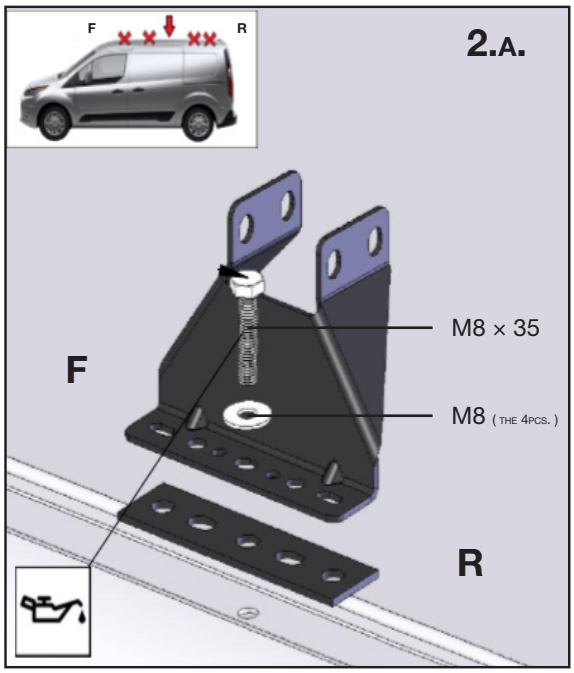

INSIDE

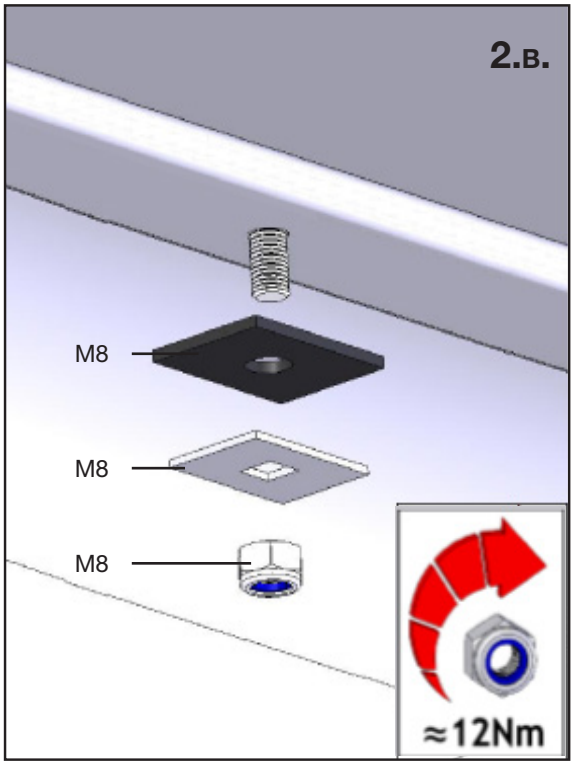

REAR

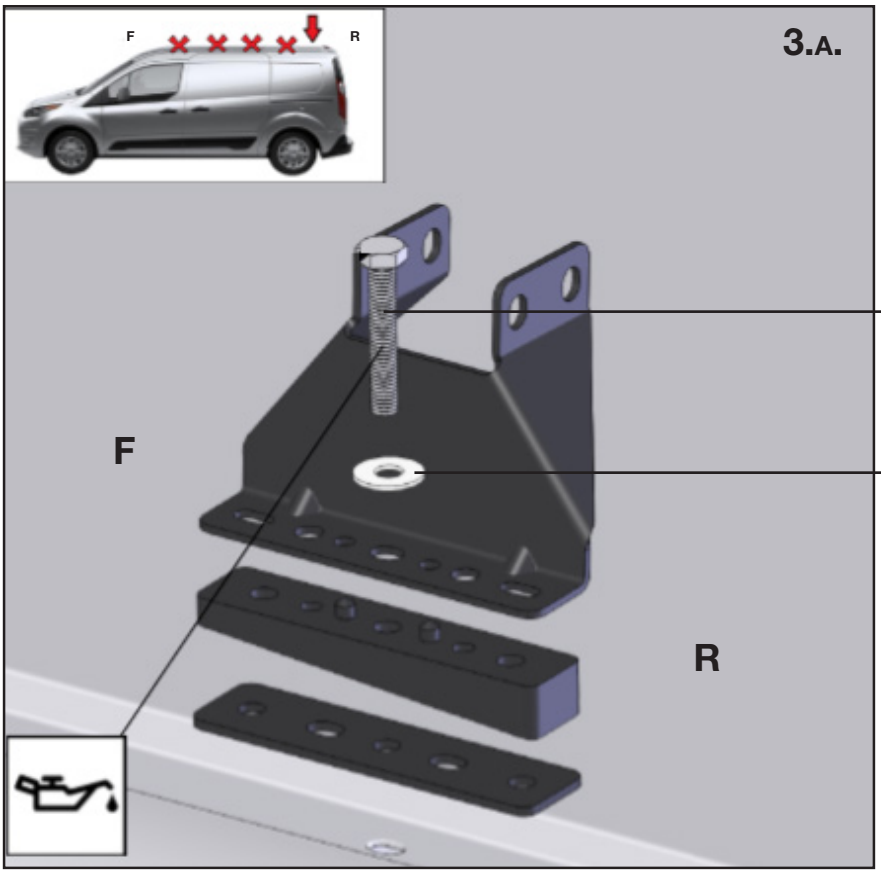

M8 × 40

M8 (THE 4PCS.)

INSIDE

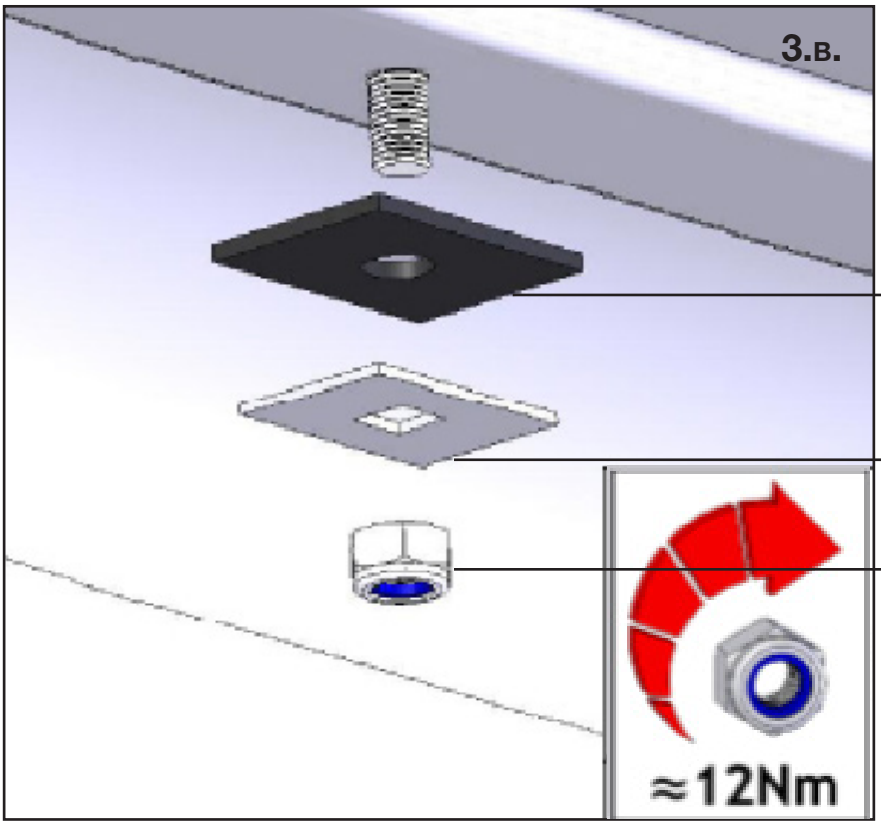

M8

M8

M8

2.1.2 Connect the 2 side rails parts.

2×

STEP 1

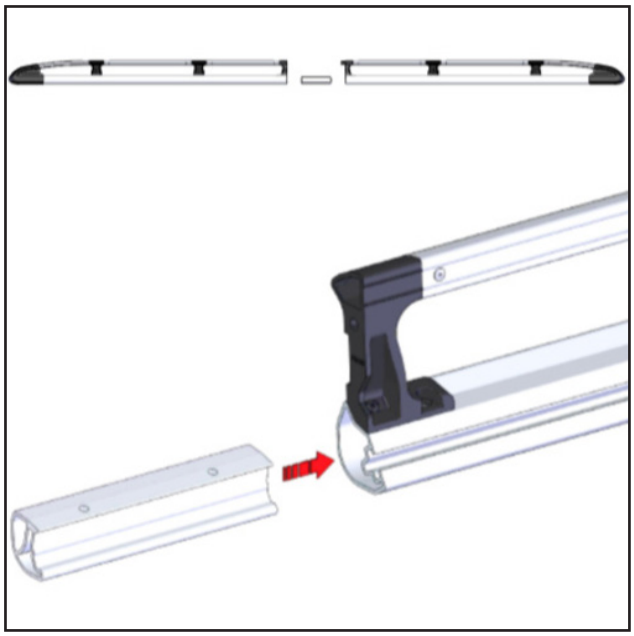

STEP 2

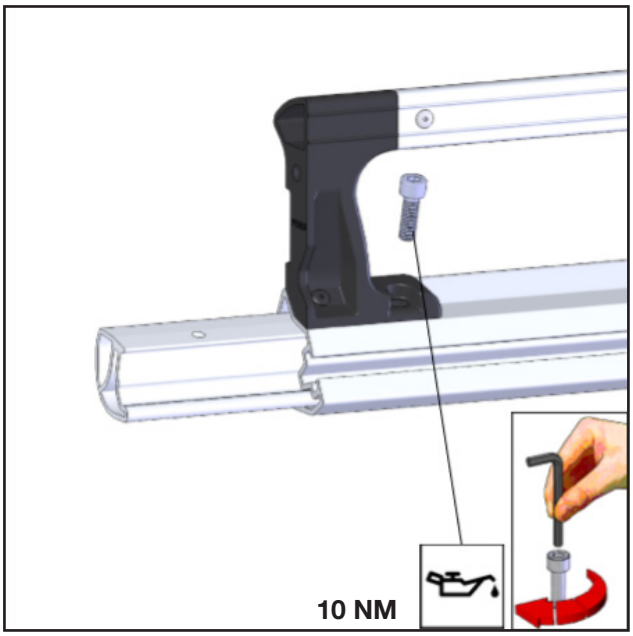

STEP 3

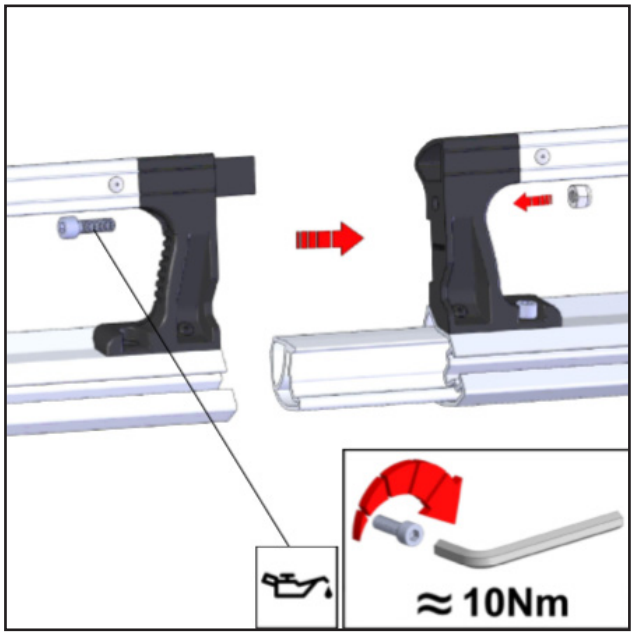

STEP 4

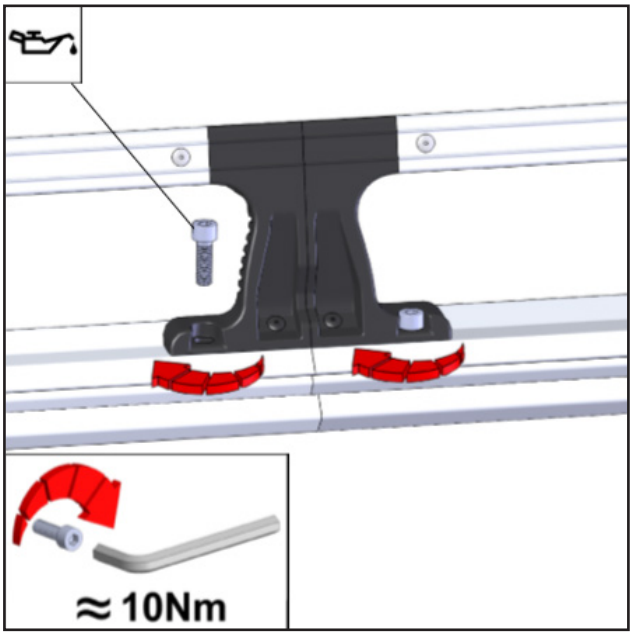

2.1.3 Install 3 bars in the feet.

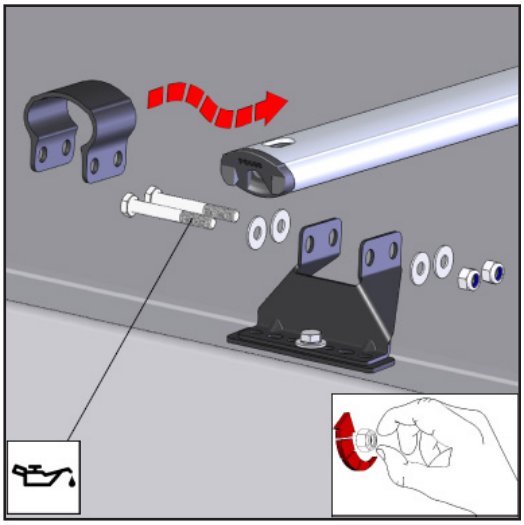

2.1.4 Slide 8pcs. of channel nuts in each side rails.

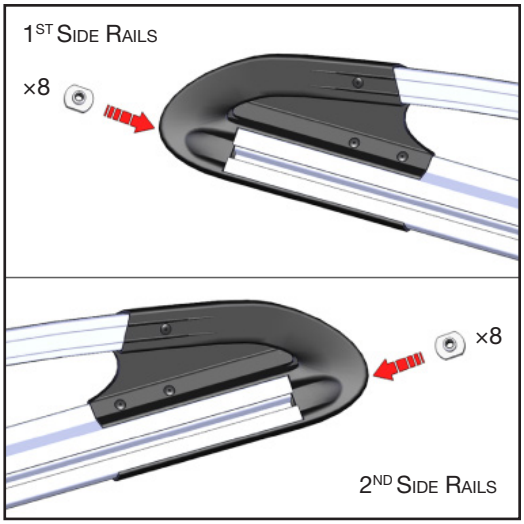

2.1.5 Attach the 2 side rails on both ends of the bar, using the 1st, 3rd & 5th Channel nuts from the front.

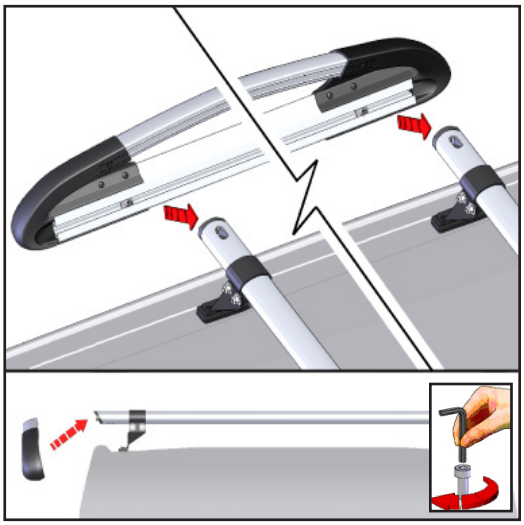

2.1.6 Attach the roller to the side rails using the 2 last channel nuts from the front.

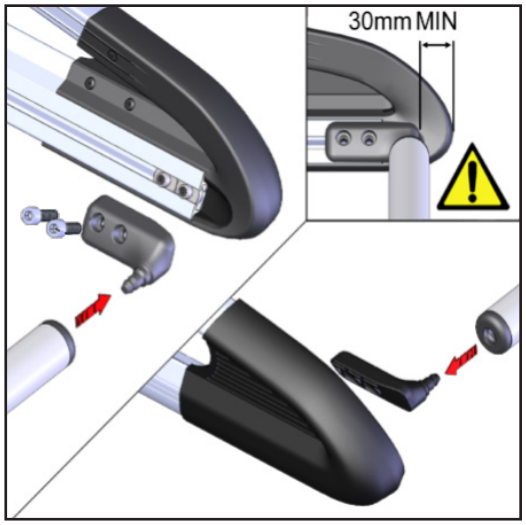

2.1.7 Slide the rack to the appropriate position.

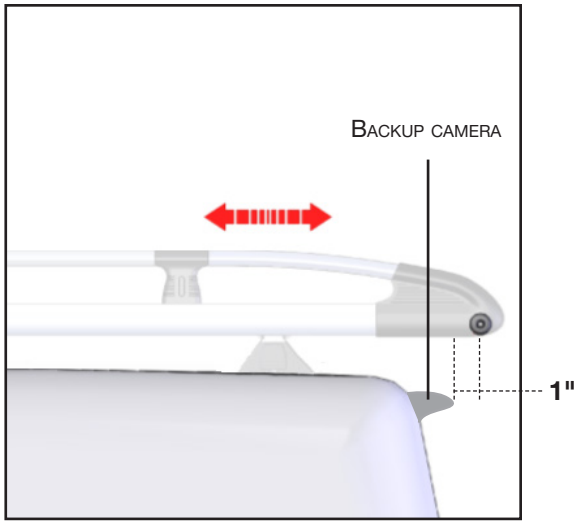

2.1.8 Center the bar on the vehicle.

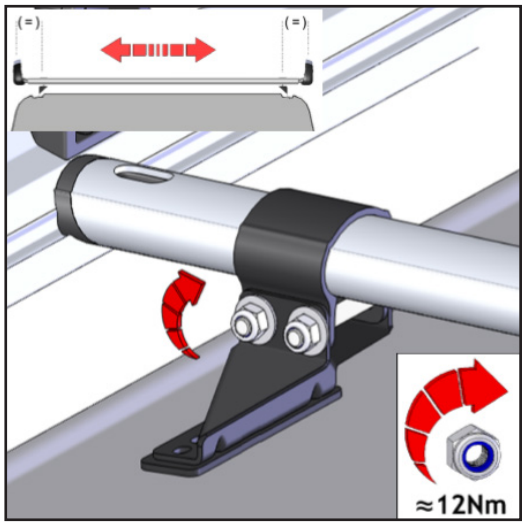

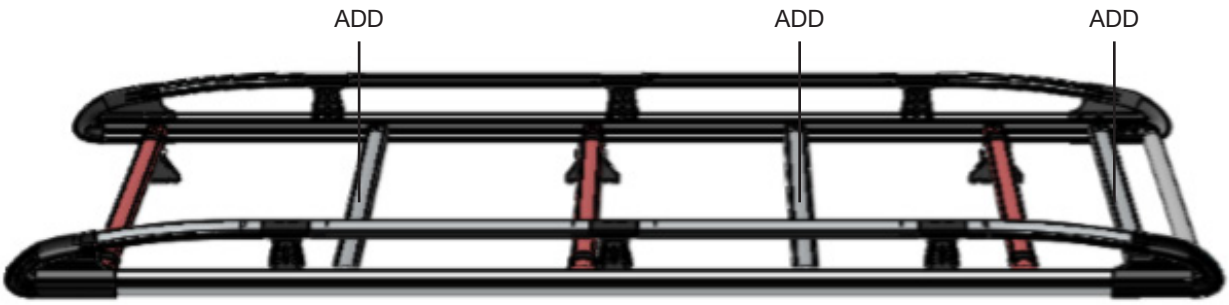

2.1.9 Attach the 3 bars.

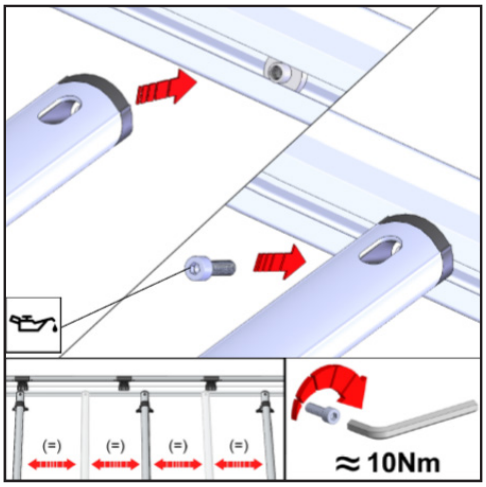

2.1.10 Attach the foot cowl to the foot.

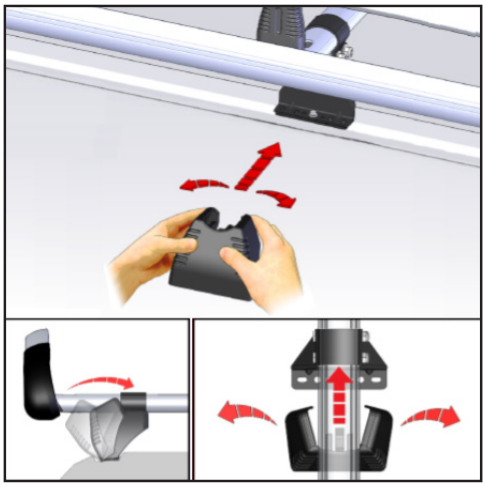

PHASE 3 – TIPS

3.1 SAFETY TIPS

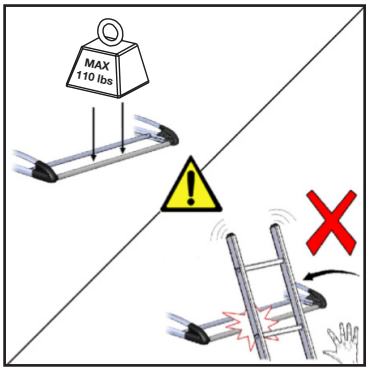

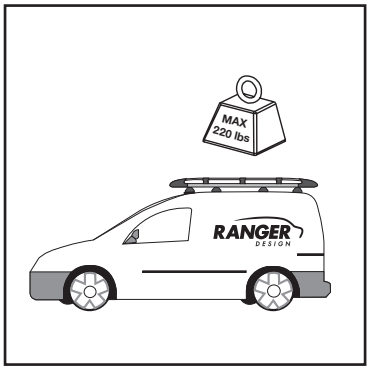

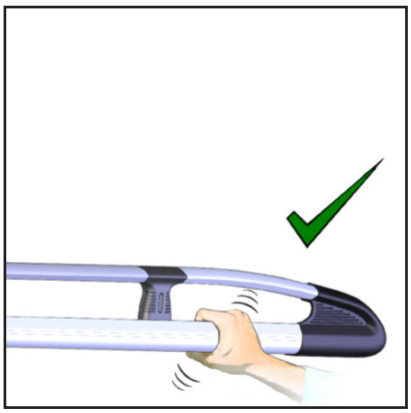

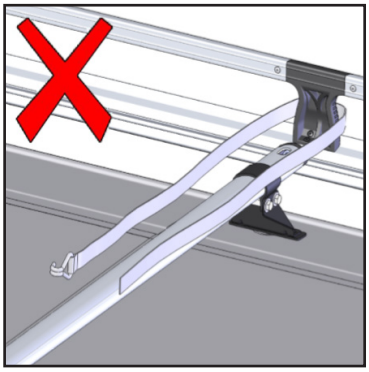

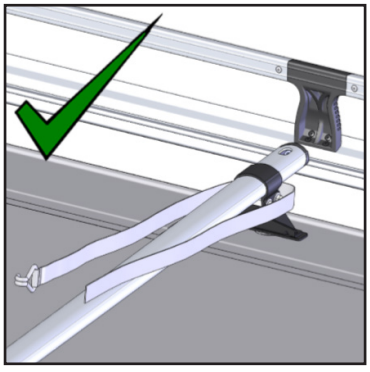

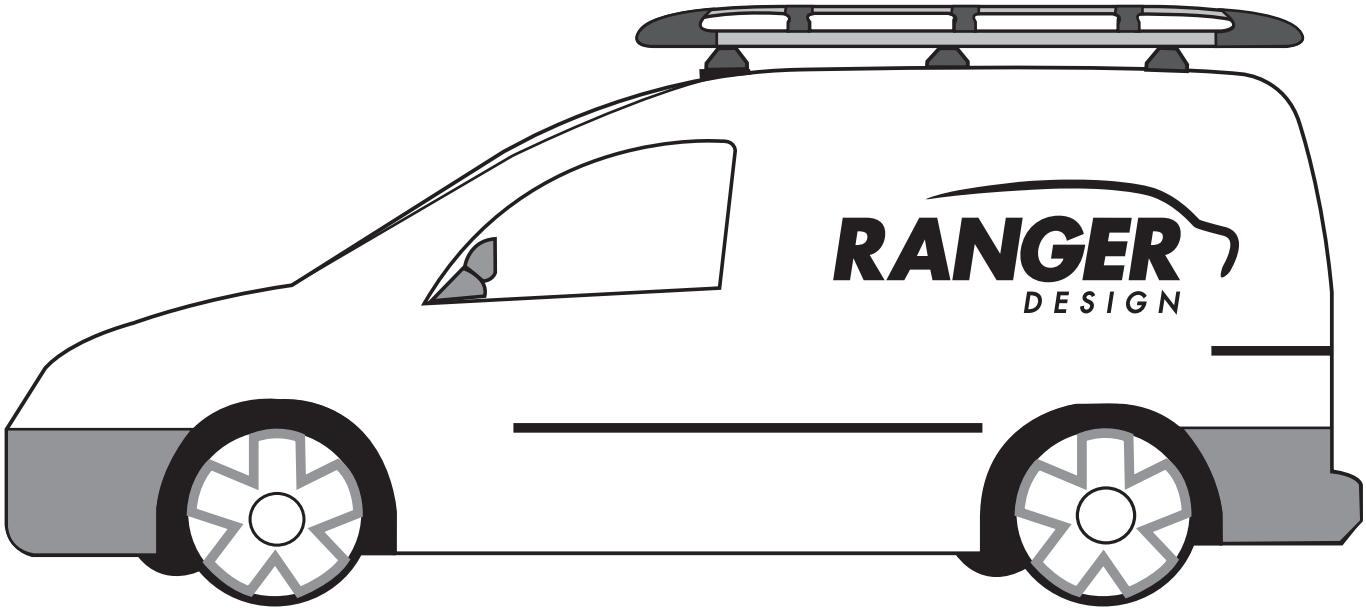

“You have successfully installed your 1506-TC Cargo Plus

Thank you for doing business with us.”

For any feedback or suggestions you may have, please contact: **cs@rangerdesign.com**

RANGER DESIGN