

INSTALLATION GUIDE



CARGO RACK

1605-FTL,	1605-FTL3,	1605-FTR,	1605-FTR3
1605-GS,	1605-GS3,	1605-PHL,	1605-PHL3
1605-MM,	1605-MM3,	1605-PHM,	1605-PHM3
1605-PHS,	1605-PHS3,	1605-PHX,	1605-PHX3
1605-DH,	1605-DH3		







ORDER OF OPERATION


CARGO RACK

 **Click on this icon next to each unit to be redirected to the respective Install Guides.**



STEP 1



16-UCD72 (Transit, Sprinter & ProMaster)  16-UCDGS (Savana) 


16-UCD66 (Metris & ProMaster City)  16-UCD60 (Connect) 



STEP 2


16-UCS72 (Transit, Sprinter & ProMaster)  16-UCSGS (Savana) 


16-UCS66 (Metris & ProMaster City)  16-UCS60 (Connect) 



*For 1605-xx3 Series (3 Crossbar Units)


STEP 3



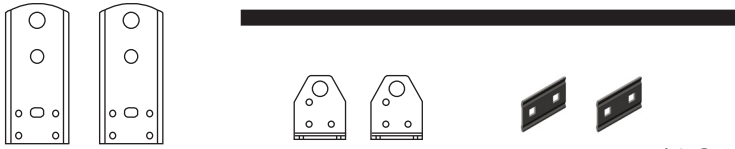









16-U0005 



*1 Cargo Rack Kit per crossbar.

STEP 4



FORD	MERCEDES-BENZ
TRANSIT 130" 18-U0042 	SPRINTER 18-U0018 
TRANSIT 148" & Ext. 18-U0030 	SPRINTER w/OEM Tracks 18-U0019 
TRANSIT CONNECT 18-U0046 	METRIS 18-U0043 
RAM	*Universal Bolt-Through foot Mounts 18-U0047 
PROMASTER 118" 18-U0020 	
PROMASTER 136" 18-U0022 	
PROMASTER 159" 18-U0032 	
PROMASTER 159" Ext. 18-U0034 	
PROMASTER CITY 18-U0045 	

*For 18-U0047: 1 kit per crossbar required.