

INSTALLATION GUIDE



CARGO RACK

1605-FTL,	1605-FTL3,	1605-FTR,	1605-FTR3
1605-GS,	1605-GS3,	1605-PHL,	1605-PHL3
1605-MM,	1605-MM3,	1605-PHM,	1605-PHM3
1605-PHS,	1605-PHS3,	1605-PHX,	1605-PHX3
1605-DH,	1605-DH3,	1605-TC,	1605-TC3
1605-PC,	1605-PC3		






ORDER OF OPERATION


CARGO RACK

 **Click on this icon next to each unit to be redirected to the respective Install Guides.**



STEP 1


16-UCD72 (Transit, Sprinter & ProMaster)  16-UCDGS (Savana) 


16-UCD66 (Metris & ProMaster City & Connect) 



STEP 2


16-UCS72 (Transit, Sprinter & ProMaster)  16-UCSGS (Savana) 


16-UCS66 (Metris & ProMaster City & Connect) 



*For 1605-xx3 Series (3 Crossbar Units)


STEP 3



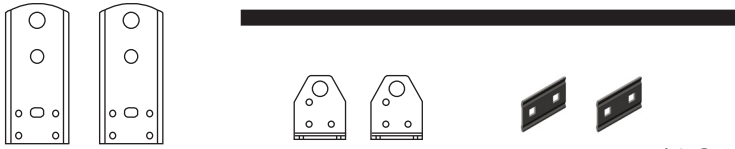









16-U0005 



*1 Cargo Rack Kit per crossbar.

STEP 4



FORD				MERCEDES-BENZ	
TRANSIT 130"	18-U0042			SPRINTER	18-U0018 
TRANSIT 148" & Ext.	18-U0030			SPRINTER w/OEM Tracks	18-U0019 
TRANSIT CONNECT	18-U0046			METRIS	18-U0043 
RAM				*Universal Bolt-Through foot Mounts	18-U0047 
PROMASTER 118"	18-U0020				
PROMASTER 136"	18-U0022				
PROMASTER 159"	18-U0032				
PROMASTER 159" Ext.	18-U0034				
PROMASTER CITY	18-U0045				

*For 18-U0047: 1 kit per crossbar required.