


INSTALLATION GUIDE

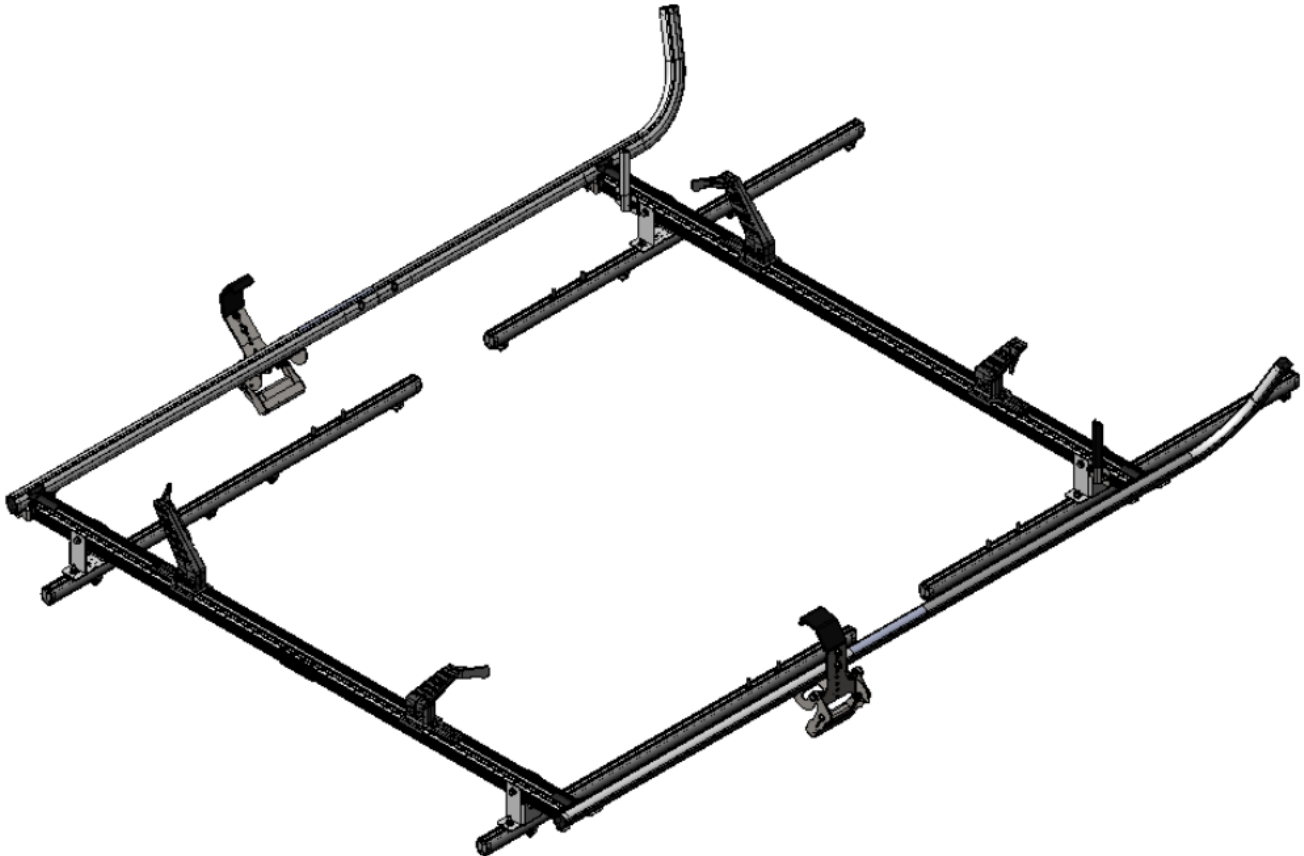

CLAMP RACK














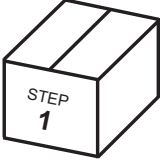




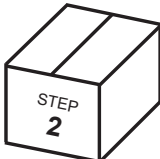





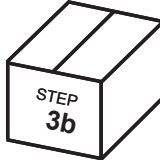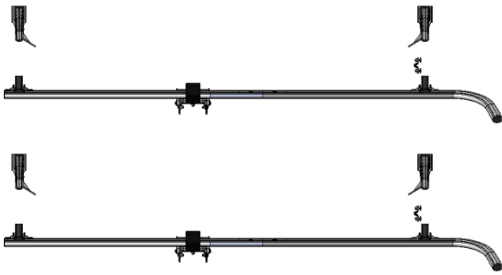

1630-FTL,	1630-FTL3,	1630-FTR,	1630-FTR3
1630-GS,	1630-GS3,	1630-PHL,	1630-PHL3
1630-MM,	1630-MM3,	1630-PHM,	1630-PHM3
1630-PHS,	1630-PHS3,	1630-PHX,	1630-PHX3
1630-DH,	1630-DH3		

RANGER
DESIGN

ORDER OF OPERATION

CLAMP RACK

 **Click on this icon next to each unit to be redirected to the respective Install Guides.**

	16-UCD72  16-UCDGS (for Savana)  16-UCD66 (for Metris) 					
						
	16-UCS72  16-UCSGS (for Savana)  16-UCS66 (for Metris) 					
						
	16-UCL77 					
						
						
	FORD			MERCEDES-BENZ		
	TRANSIT 130"	18-U0042		SPRINTER	18-U0018	
	TRANSIT 148"	18-U0030		SPRINTER w/OEM Tracks	18-U0019	
				METRIS	18-U0043	
	RAM			*Universal Bolt-Through foot Mounts	18-U0047	
	PROMASTER 118"	18-U0020				
	PROMASTER 136"	18-U0022				
	PROMASTER 159"	18-U0032				
	PROMASTER 159" Ext. 18-U0034					

*For 18-U0047: 1 kit per crossbar required.