


# INSTALLATION GUIDE

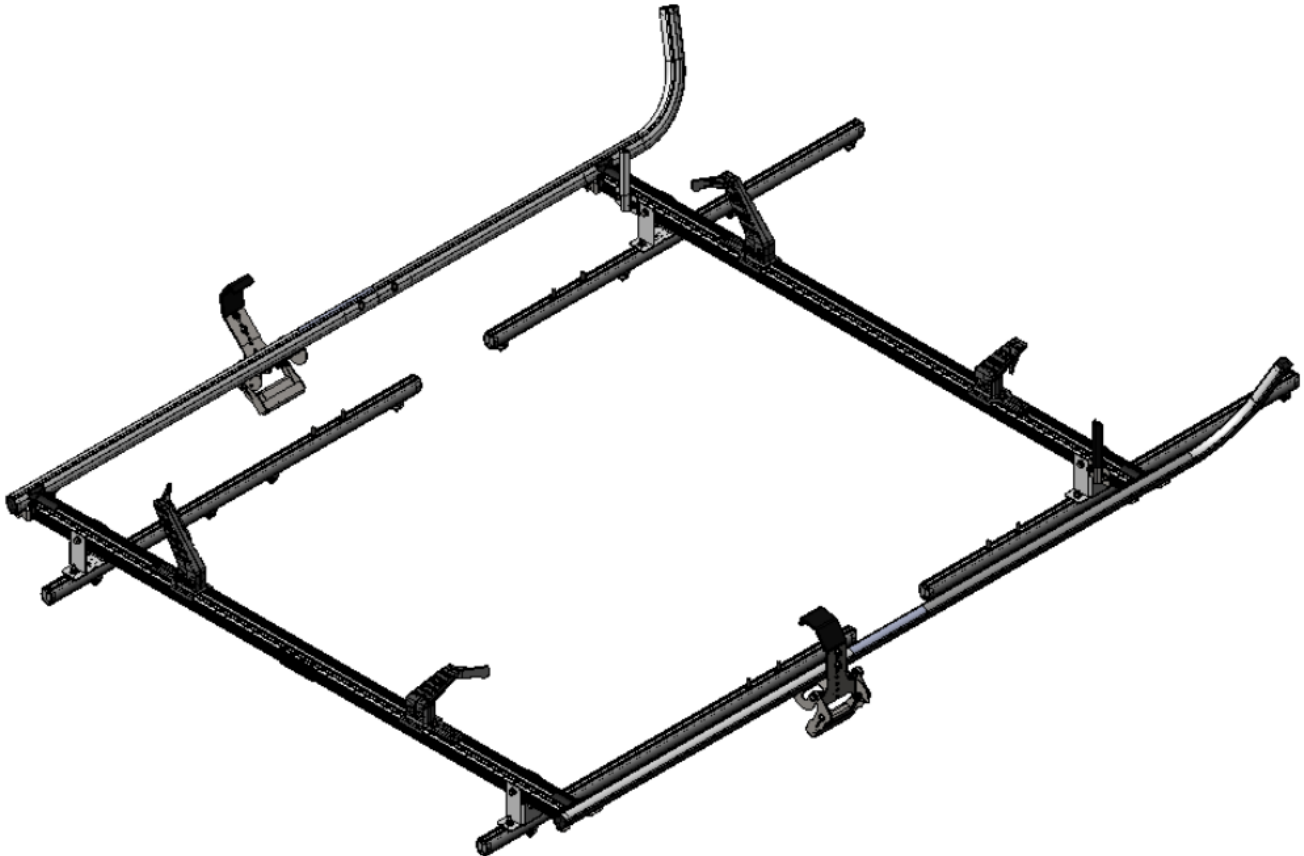

## CLAMP RACK















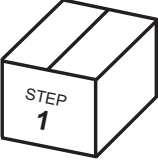




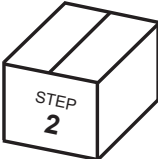



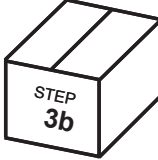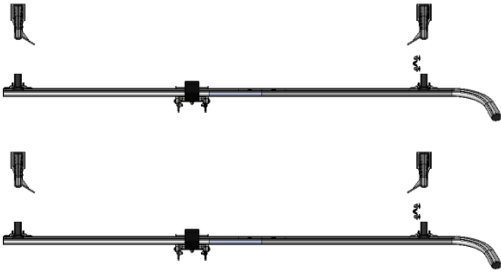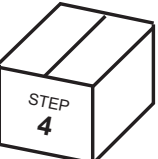


1630-FTL,	1630-FTL3,	1630-FTR,	1630-FTR3
1630-GS,	1630-GS3,	1630-PHL,	1630-PHL3
1630-MM,	1630-MM3,	1630-PHM,	1630-PHM3
1630-PHS,	1630-PHS3,	1630-PHX,	1630-PHX3
1630-DH,	1630-DH3		

**RANGER**  
DESIGN

# ORDER OF OPERATION

## CLAMP RACK

 **Click on this icon next to each unit to be redirected to the respective Install Guides.**

	<b>16-UCD72</b>  <b>16-UCDGS (for Savana)</b>  <b>16-UCD66 (for Metris)</b> 					
						
	<b>16-UCS72</b>  <b>16-UCSGS (for Savana)</b>  <b>16-UCS66 (for Metris)</b> 					
						
	<b>16-UCL77</b> 					
						
						
	<b>FORD</b>	<b>MERCEDES-BENZ</b>				
	TRANSIT 130"	18-U0042		SPRINTER	18-U0018	
	TRANSIT 148"	18-U0030		SPRINTER w/OEM Tracks	18-U0019	
				METRIS	18-U0043	
	<b>RAM</b>			<b>*Universal Bolt-Through foot Mounts</b>	18-U0047	
	PROMASTER 118"	18-U0020				
	PROMASTER 136"	18-U0022				
	PROMASTER 159"	18-U0032				
	PROMASTER 159" Ext. 18-U0034					

\*For 18-U0047: 1 kit per crossbar required.