


INSTALLATION GUIDE

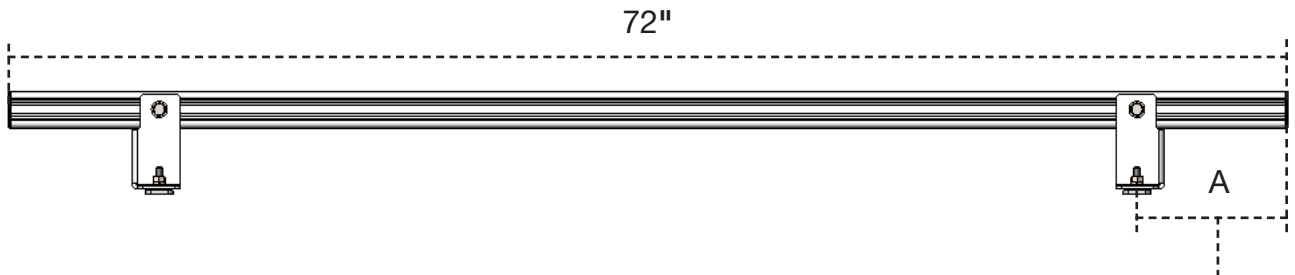

| FOOT PLACEMENT GUIDE | |
|----------------------|---------------------|
| VEHICLE | DIMENSION (A) |
| NISSAN NV | 7" |
| SPRINTER | 10" HR, 6 - 1/2" LF |
| TRANSIT | 8 - 7/8" |
| PROMASTER | 7 - 1/16" |

18-U1805 Max Rack: Third Crossbow Retrofit kit 1 BAR (72")



QUICK START GUIDE


Phase 1 - Assembly

- 1.1.1 SETUP (VERIFY ALL PARTS ARE PRESENT)..... 2
- 1.2.1 ASSEMBLY (PUT THE CROSSBAR IN THE TABLE)..... 3

PHASE 1 – ASSEMBLY

1.1 SETUP

1.1.1 Verify all parts are present.

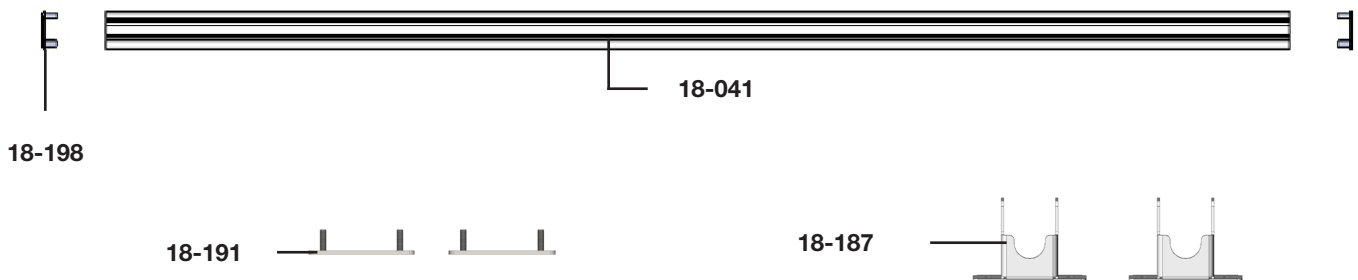


BILL OF MATERIALS

| Item No. | Description | Qty. |
|----------|------------------|------|
| 18-187 | Foot | 2 |
| 18-041 | Crossbar 72" | 1 |
| 18-198 | End Plastic Plug | 2 |
| 18-191 | Stud Plate | 2 |
| 96-1805 | Fastener kit | 1 |

PHASE 1 – ASSEMBLY

1.2 PREPARATION

1.2.1 Remove crossbar from the box and put the crossbar on the table.

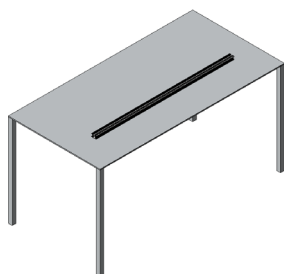

NOTE:

OPEN THE NEXT BOX AND FOLLOW THE INSTALL GUIDE INSIDE THE BOX ON HOW TO ASSEMBLED YOU RACK.