

INSTALLATION GUIDE



MAX RACK

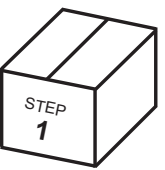




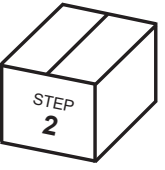








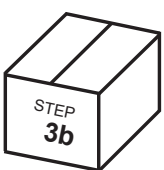


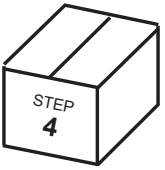











1840-FTL,	1850-FTL,	1850-FTL3
1840-FTR,	1850-FTR,	1850-FTR3
1840-GS,	1850-GS,	1850-GS3
1840-MM,	1850-MM,	1850-MM3



ORDER OF OPERATION

LOW ROOF MAX RACK

 Click on this icon next to each unit to be redirected to the respective Install Guides.

	<div>16-UCD72 (Transit) </div> <div>16-UCDGS (for Savana) </div> <div>16-UCD66 (for Metris) </div> 																
	<div>16-UCS72 (Transit) </div> <div>16-UCSGS (for Savana) </div> <div>16-UCS66 (for Metris) </div>  <div>*Optional (for 1850-3 only)</div>																
<div>18-U1820 </div>  	<div>18-U1825 </div>   <div>*Optional (for 1850 series or 1850-3 series)</div>																
 <div><table border="0"><thead><tr><th colspan="2">FORD</th><th colspan="2">MERCEDES-BENZ</th></tr></thead><tbody><tr><td>TRANSIT 130"</td><td>18-U0042 </td><td>METRIS</td><td>18-U0043 </td></tr><tr><td>TRANSIT 148"</td><td>18-U0030 </td><td></td><td></td></tr><tr><td></td><td></td><td colspan="2">*Universal Bolt-Through foot Mounts 18-U0047 </td></tr></tbody></table><div>*For 18-U0047: 1 kit per crossbar required.</div></div>		FORD		MERCEDES-BENZ		TRANSIT 130"	18-U0042 	METRIS	18-U0043 	TRANSIT 148"	18-U0030 					*Universal Bolt-Through foot Mounts 18-U0047 	
FORD		MERCEDES-BENZ															
TRANSIT 130"	18-U0042 	METRIS	18-U0043 														
TRANSIT 148"	18-U0030 																
		*Universal Bolt-Through foot Mounts 18-U0047 