


# QUICK START GUIDE

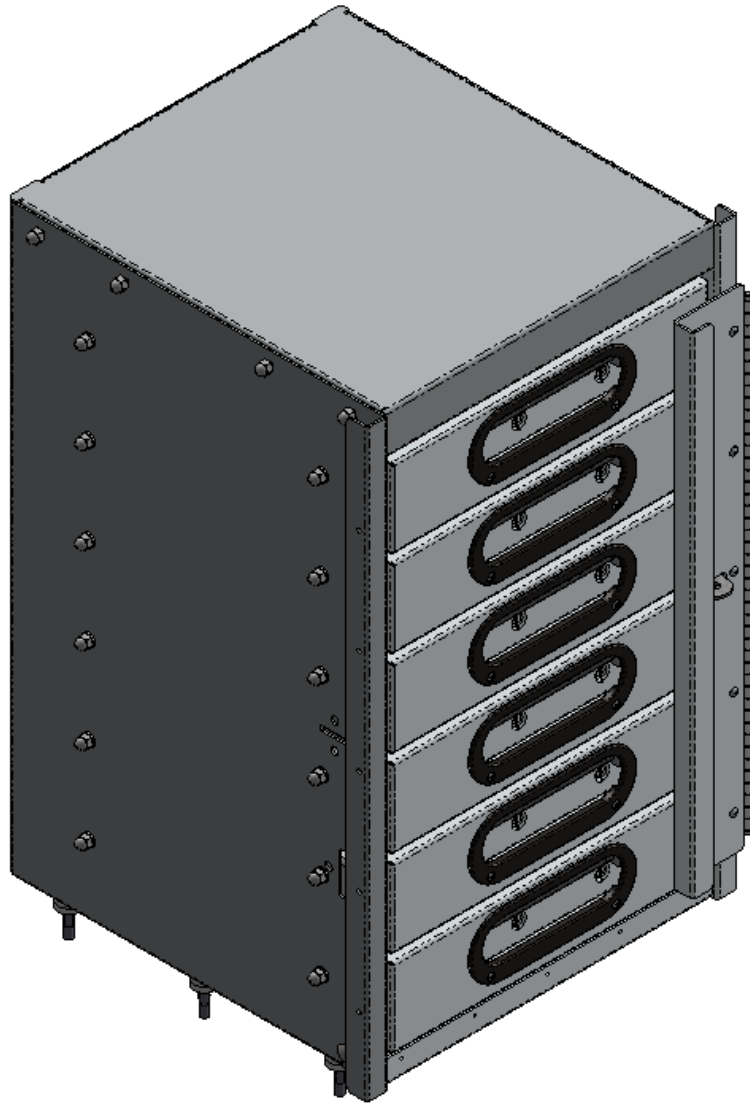


5067-6 Cargo Van Cabinet, 6 Drawers

# PHASE 1 – ASSEMBLY

## 1.1 SETUP

1.1.1 Unpack components; compare with the bill of materials.

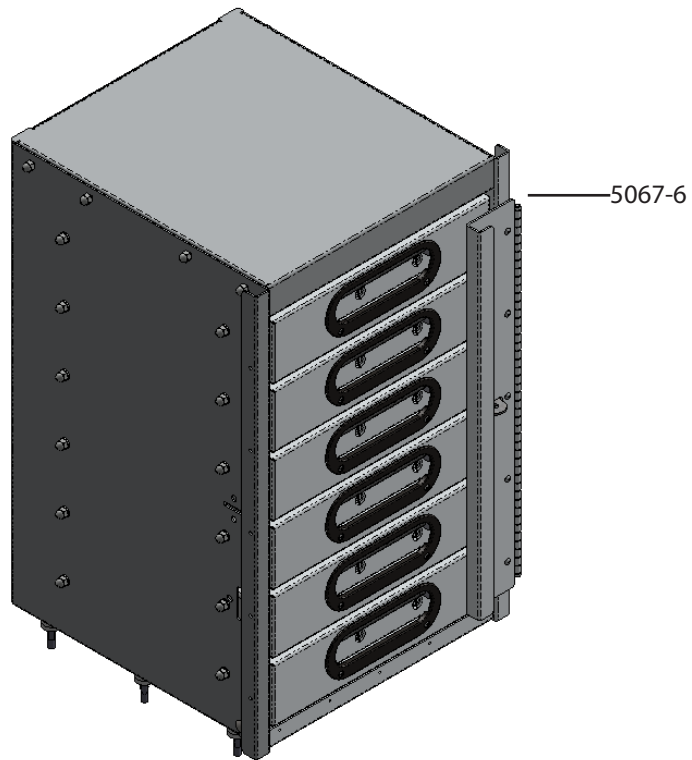

1.1.2 Verify all parts are present.

### BILL OF MATERIALS

Item No.	Description	Qty.
5067-6	Cargo Van Cabinet, 6 Drawers	1
90-5035	Customer Installation Fastener Kit	1