


INSTALLATION GUIDE



6049

Locking cabinet, vent kit

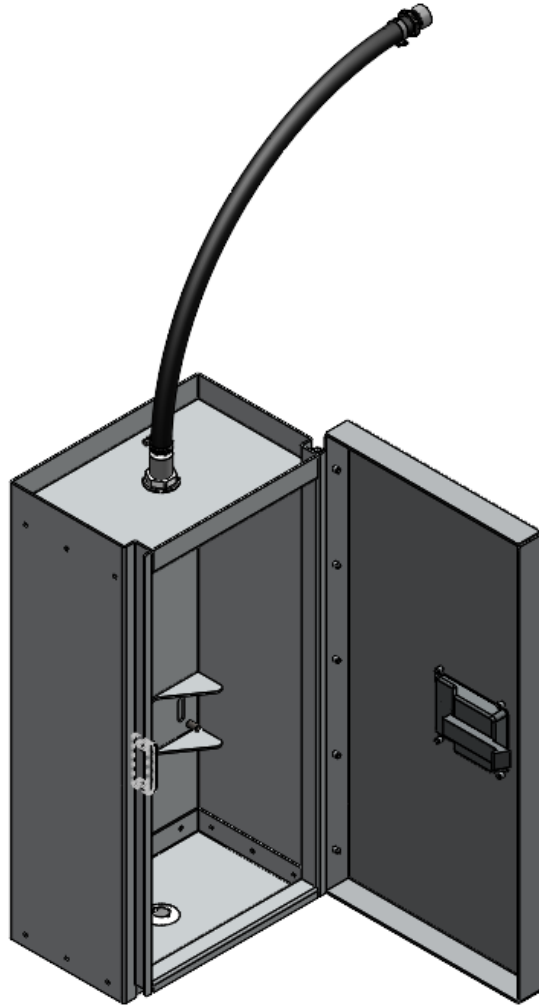

SAFETY INSTRUCTIONS

Before the installation, carefully read the supplied installation guide to avoid possible injuries and damages resulting from incorrect installation. Always keep the installation guide in an accessible location at all times for reference during installation.



WARNING

- Only a qualified person/s should install this product.
- This product requires one (1) person to install.
- Always use safety gloves, glasses, and shoes.



1 PERSON




CAUTION

- Follow all vehicle manufacturer instructions before attempting any installation.
- Before drilling for the tapping inserts, use a drill stop collar to prevent accidental drilling the van metal floor panel which may result in damage to components underneath, such as wiring harnesses, fuel tanks and battery modules.

PREPARATION

Tools Needed

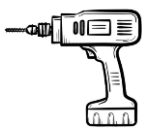

Drill



11/16 bit




7/8 bit



Screw Driver




Adjustable wrench 10" & above

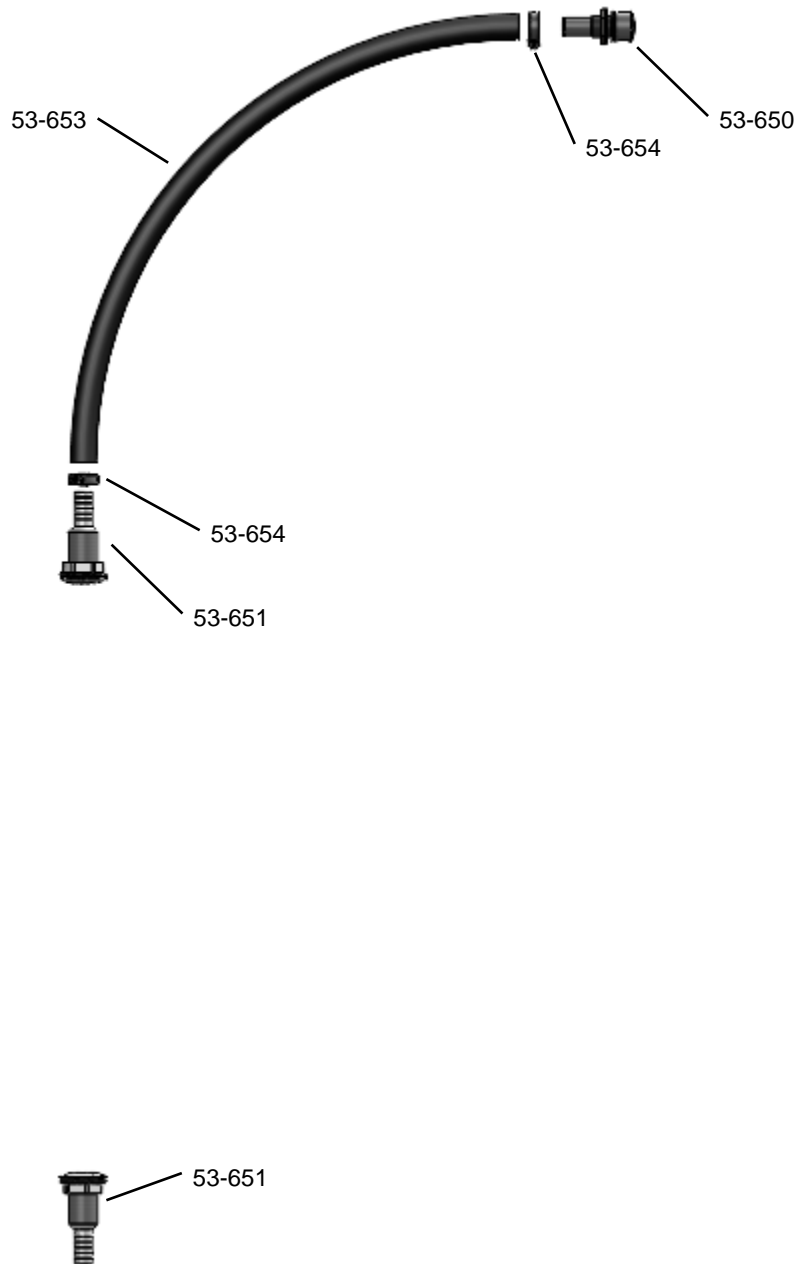BILL OF MATERIALS


Item No:	Description	Qty.
53-650	Vent, exterior	1
53-653	Rubber hose	24"
53-654	Hose clamp	2
53-651	Vent, upper cabinet	2


ASSEMBLY

STEP 1

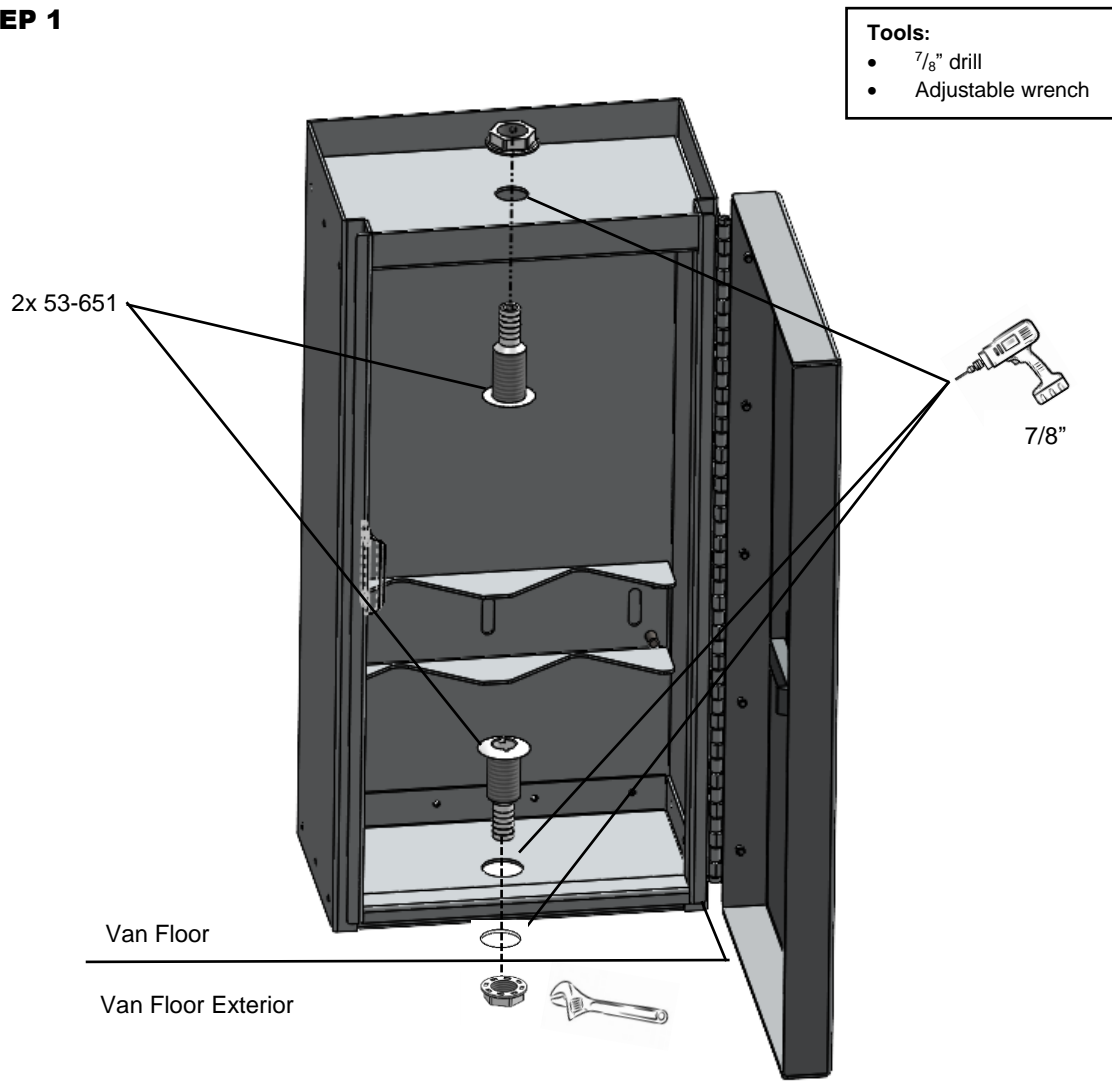

STEP 2

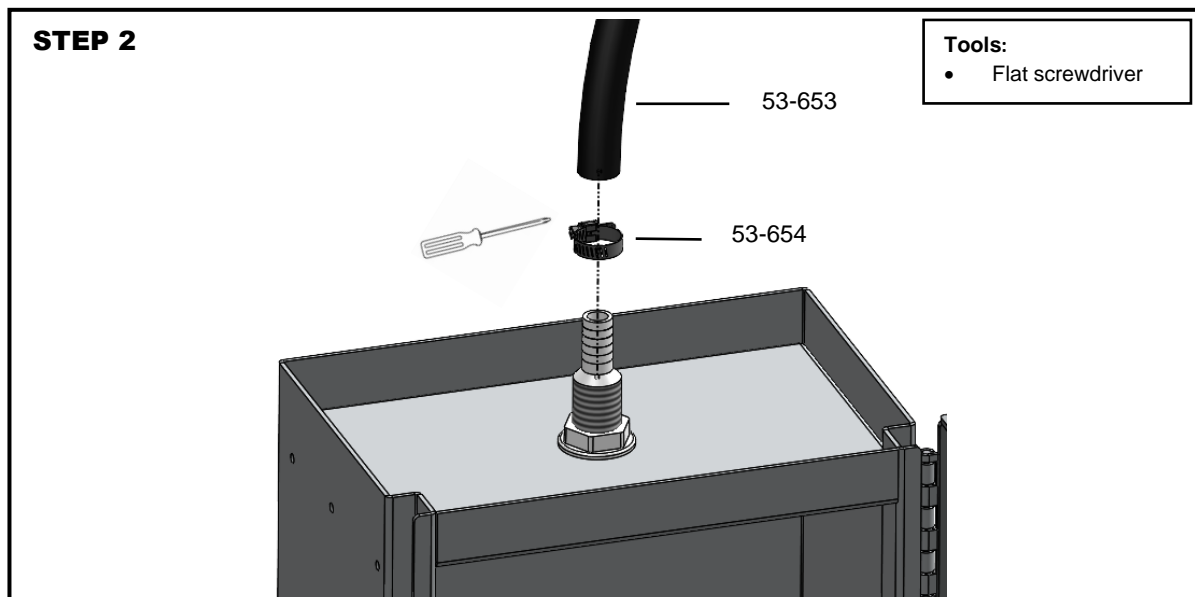

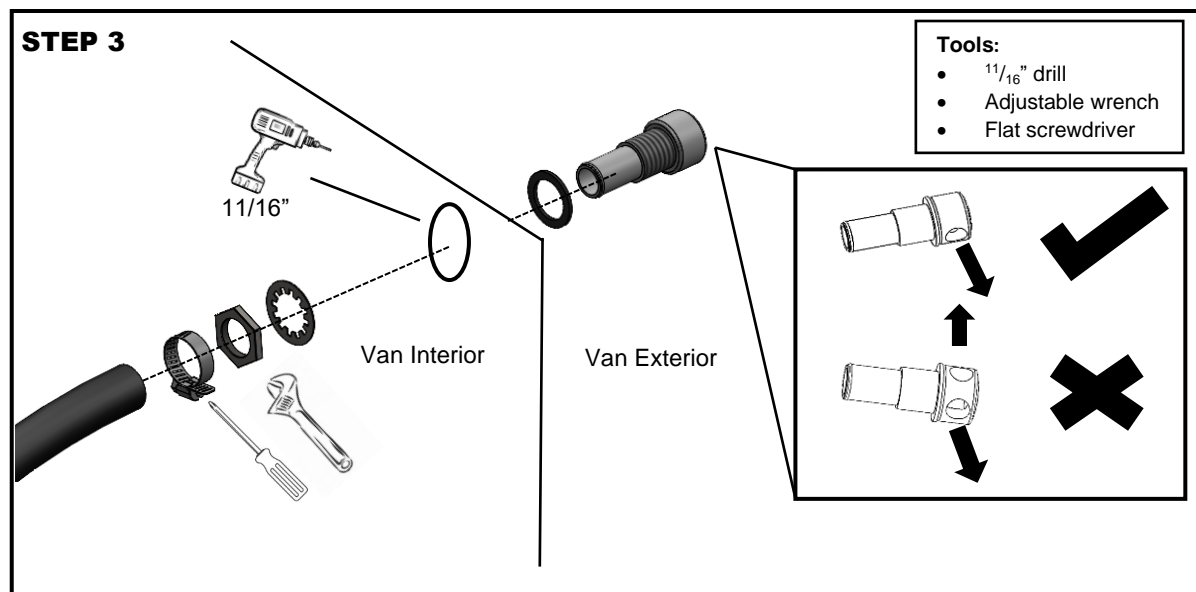

"You have successfully installed your vent kit, thank you for doing business with us."

For any feedback or suggestions, you may have, please contact: cs@rangerdesign.com

