


# QUICK START GUIDE

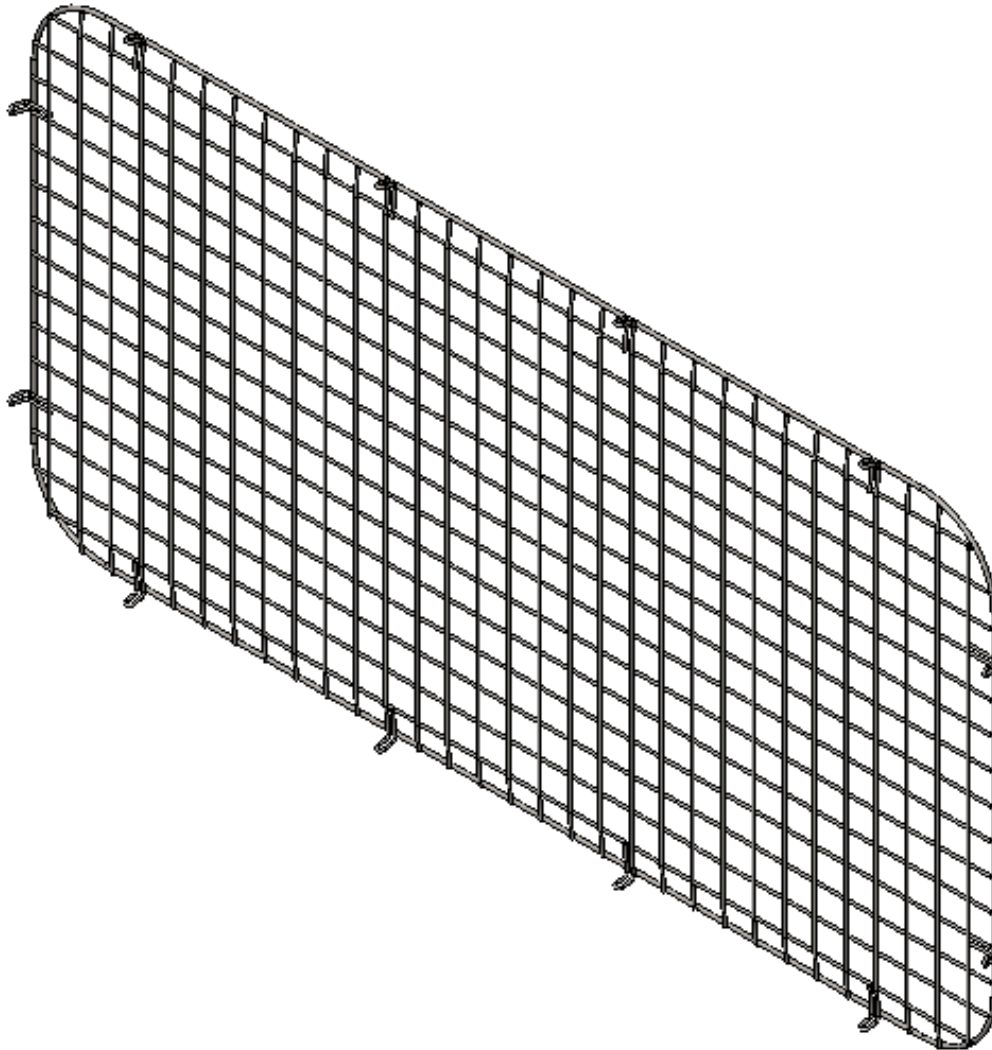


6118 Window Grill, Ram ProMaster, Side Door

# PHASE 1 – ASSEMBLY

## 1.1 SETUP

1.1.1 Unpack components; compare with the bill of materials.

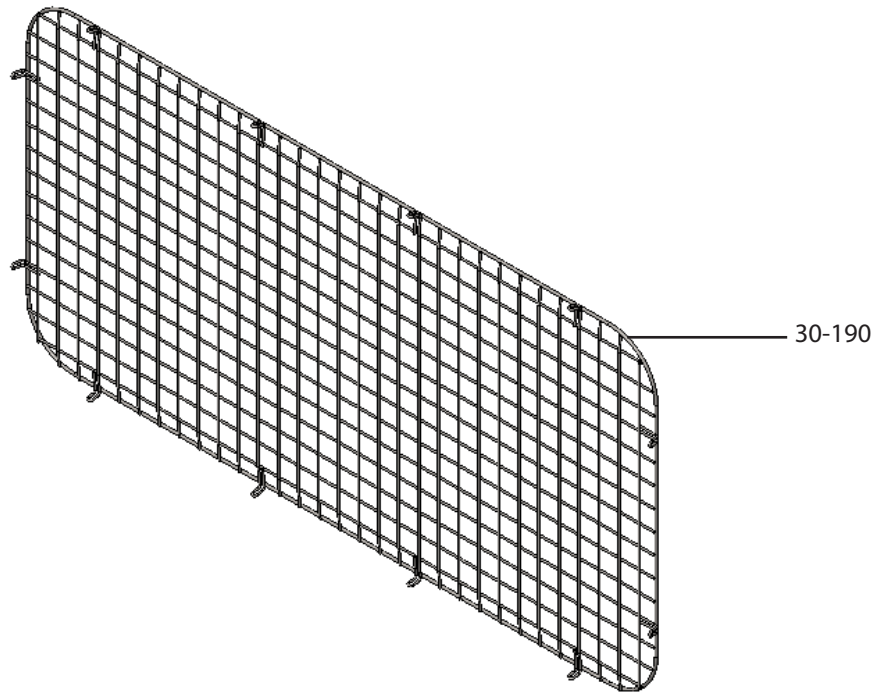

1.1.2 Verify all parts are present.

### BILL OF MATERIALS

Item No.	Description	Qty.
30-190	Window mesh, pass door, ProMaster	1
90-7124	Fastener Kit	1

1.1.3 Fastener kits.


90 - 7124 Fastener Kit

12x



# 92-102

Hex Screw  
#14 x 1"  
ZINC



Fastener Install

12x



#92-102 Hex Screw 1"