

INSTALLATION GUIDE



6256 BUCKET SEAT SET

Ford Transit Connect (2014-2016)



Scan the QR for the latest Install-Guide.





BEFORE YOU BEGIN

READ, UNDERSTAND, AND FOLLOW ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT. FAILURE TO FOLLOW THESE DIRECTIONS MAY RESULT IN PROPERTY DAMAGE, SERIOUS BODILY INJURY, AND/OR DEATH. RANGER DESIGN IS NOT RESPONSIBLE FOR ANY PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH THAT OCCURRED WHILE USING ANY RANGER DESIGN PRODUCTS.



WARNING

- Failure to use Ranger Design-provided fasteners, brackets, and proper installation guidelines could increase risk of serious personal injury and/or death.
- If drilling is required to complete this installation: improper drilling can cause property damage to vehicles and could lead to electric shock, fire, or even death.
- If drilling is required to complete this installation: Ensure that drilling is only performed on areas of the vehicle allowed by the vehicle's Original Equipment Manufacturer's Body Builders Layout Book (or equivalent document).
- Prior to installation, inspect the vehicle to ensure that installation will not interfere with, or cause obstruction of, any critical components such as electrical wiring, fuel tanks, fuel-cells, locks, latches, etc.
- The installer or manufacturer is responsible for ensuring anchorages are installed onto suitable wall and floor structures; wall and floor strength must meet applicable performance requirements.
- Do not install systems into any weak or unsound materials such as plastics, woods, thin-walled metals, etc. without proper reinforcement.
- Do not install this product where it could interfere with the deployment of airbags. Failure to comply could result in death or serious injury.
- Do not install this product where it could ingress on the Transit Occupant Protection Zone. Failure to comply could result in death or serious injury.
- Incorrect installation could cause water leaks, electric shock or fire.
- Any cargo vehicle with any cargo or equipment should use a certified partition. See Ranger Design website for some partition options. (<https://rangerdesign.com/>)
- Mountings rails are recommended for any attachment to the vehicle walls.
- All items in the cargo area should be properly secured and partition doors closed while the vehicle is in motion.
- Check your vehicle's tare weight and remaining load capacity with all the equipment installed. Never exceed the maximum Gross Vehicle Weight Rating (GVWR), Gross Axle Weight Ratings (GAWRs), or other maximum loads permitted by the vehicle's Original Equipment Manufacturer (OEM) and required by law.
- The heaviest items must be placed towards the bottom of the vehicle, while the lightest ones can be arranged upwards. Vehicle cargo loading weight proportion should follow the following guidelines:



- The final alterer and/ or modifier should review the warning sheet with the customer before the vehicle is released to the customer or for general use. These instructions should remain with the vehicles a all times.
- Any modification or unintended use of this product voids any warranty and could create a hazardous condition.
- Ranger Design provides recommended assembly and installation instructions which should be followed to ensure correct operation. Failure to do so could result in invalidating the product's compliance, warranty and cause injury. Notwithstanding, the final stage vehicle alterer and/or modifier is responsible for the integration, installation, and compliance of the product in its final location to all applicable regulations and standards. Failure to maintain compliance of the vehicle to applicable regulations and standards could be punishable by law. Alterers and/or modifiers should consult with all local authorities prior to commissioning.



CAUTION

- Drilling is required to complete this installation. Before drilling, ensure that you will not hit any critical parts of the vehicle like the gas tank, wiring harness, or hose. Consult the vehicle OEM documentation as necessary. When drilling, use a drill collar to reduce the risk of damage to the vehicle.
- Any materials, padding, or glazing installed in the vehicle must comply with FMVSS/CMVSS 201/205/302, as applicable.
- In the event of a motor vehicle accident or collision where a Ranger system has been installed, especially ones where the vehicle structure is damaged and/or the air bags deploy and/or the vehicle has been towed, the system must be inspected to ensure continued soundness and safety before returning the vehicle to service. Damaged components should be replaced as necessary.
- All system components should be regularly inspected, cleaned, and maintained pursuant to Ranger guidelines.

QUICK START GUIDE


Phase 1 - Preparation

- ❑ 1.1 Remove Headrests..... 4

Phase 2 - Installation

- ❑ 2.1 Install Seat Back Cover..... 5
- ❑ 2.2 Install Seat Bottom Cover..... 6
- ❑ 2.3 Install Headrest Cover..... 9

PHASE 1 – PREPARATION
1.1 REMOVING

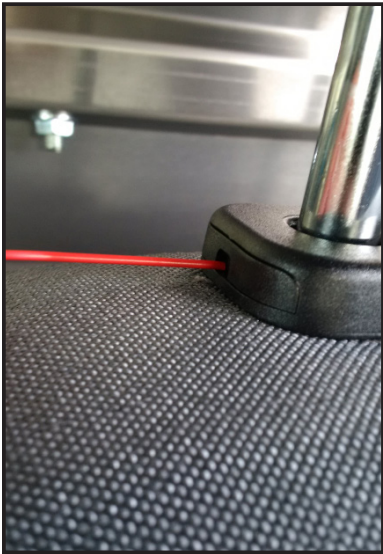


- ❑ **1.1 Remove Headrests.**
 - ❑ Pull headrests out of the seats by pressing the tabs at the base of the headrests and pulling up. Press the small tab on the inside of the headrest mount with a paperclip or small pick.

BILL OF MATERIALS

Item No.	Description	Qty.
62-563	Seat Back Cover Passenger Side	1
62-561	Seat Bottom Cover Passenger Side	1
62-564	Headrest Cover Passenger Side	1
62-562	Seat Back Cover Driver Side	1
62-560	Seat Bottom Cover Driver Side	1
62-565	Headrest Cover Driver Side	1

PHASE 2 – DRIVER’S SEAT COVER INSTALLATION

2.1 SEAT COVER INSTALLATION

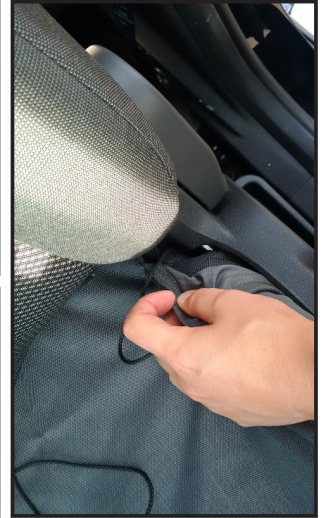

❑ 2.1 Install Seat Bottom Cover.

- ❑ Ensure the tag inside the cover corresponds with the seat you are working on. Each cover will have a Driver or Passenger tag.
- ❑ Lean seat back.
- ❑ Undo elastic straps from under seat bottom to release seat back flap.
- ❑ Push flap on top of cover between seat back and seat bottom.
- ❑ Tuck sides of cover behind plastic trim.
- ❑ Push strings between seat bottom and plastic trim. They will go through where the seat back and bottom meet.
- ❑ Pull strings behind seat and pull tight.
- ❑ Tie a loop in one string, close to the edge of the seat.
- ❑ Run the other string through the loop and pull as tight as possible. This is what keeps your seat bottom from shifting.
- ❑ Pull bottom flaps from front of seat bottom and attach to top flap under the rear of the seat.
- ❑ Flaps **MUST** run OVER bars and brackets under seat.



Seat cover bottom flap, running OVER all bars,

❑ 2.2 Install Seat Back Cover.



- ❑ Ensure the tag inside the cover corresponds with the seat you are working on.
Each cover will have a Driver or Passenger tag.
- ❑ Turn cover 3/4 of the way inside out.
- ❑ Pull cover over seat back, pulling tight against the top of the seat.
- ❑ Align the holes in the cover with the headrest holes on the seat back.
- ❑ Work the plastic trim around the headrest holes through the holes in the seat cover.
- ❑ Pull the cover down over the seat, unrolling as you go.
- ❑ Push the front flap of the cover between the seat back and seat bottom.
- ❑ Pull flap tight and fasten to Velcro under seat bottom.
- ❑ Re-attach elastic straps under seat bottom.
- ❑ Pull the rear flap tight and fasten to Velcro under seat bottom.

PHASE 3 – PASSENGER’S SEAT COVER INSTALLATION

3.1 SEAT COVER INSTALLATION



- ❑ Ensure the tag inside the cover corresponds with the seat you are working on.
Each cover will have a Driver or Passenger tag.
- ❑ Undo elastic strap holding seat back flap from under seat bottom (Black strap with white clip).
- ❑ Tip seat back flap up and tuck inside seat cover as you pull it down.
- ❑ Turn seat cover 3/4 of the way inside out.
- ❑ Pull seat back cover into position, making sure that the holes in the cover align with the holes in the seat back.
- ❑ Stretch the cover over the headrest holes.
- ❑ Continue pulling the cover down the seat back, turning it right side out as you go.
- ❑ Push flap from front of cover between seat back and seat bottom, out the back of the seat .
- ❑ Lean the seat back all the way forward.
- ❑ Pull the flap tight and attach to the Velcro on the back of the seat.

❑ 3.2 Install Seat Bottom Cover.



- ❑ Ensure the tag inside the cover corresponds with the seat you are working on. Each cover will have a Driver or Passenger tag.
- ❑ Lean seat back.
- ❑ Undo elastic straps from under seat bottom to release seat back flap.
- ❑ Push flap on top of cover between seat back and seat bottom.
- ❑ Tuck sides of cover behind plastic trim.
- ❑ Push strings between seat bottom and plastic trim. They will go through where the seat back and bottom meet.
- ❑ Pull strings behind seat and pull tight.
- ❑ Tie a loop in one string, close to the edge of the seat.
- ❑ Run the other string through the loop and pull as tight as possible. This is what keeps your seat bottom from shifting.
- ❑ Pull bottom flaps from front of seat bottom and attach to top flap under the rear of the seat.
- ❑ Flaps MUST run OVER bars and brackets under seat.

Seat cover bottom flap, running OVER all bars,

☐ **3.3 Install Headrest Covers.**

- ☐ Put headrests back on seats.
- ☐ Press tabs at base of headrest and push headrest into seat back.
- ☐ Pull headrest cover over headrest with “hook” Velcro on the back and “loop” Velcro on the front.
- ☐ Pull front flap over back flap and fasten.





**“Congratulations, you have successfully installed your
Seat Cover Set!**

Thank you for doing business with us.”

